

**MIDI Pedal Converter MPC-10/MPC-20
Compatible Pedal Models**

No.	Pedal Type	Models/Name	Remarks
1	Expression Pedal	M-Audio EX-P Expression Pedal	Please place the pedal in the middle area and then connect it to the MIDI Pedal Converter for better recognition range.
2		Roland EV-5 Expression Pedal	
3		Roland DP-10	
4		AKAI Expression Pedal	
5		Nektar NX-P Pedal	
6		On-Stage KEP100	
7		KORG Exp-2 Pedal	
8		YAMAHA FC-7 Expression Pedal	
9		VALETON EP-2	
10		Roland RPU-3	
11	Switch Pedal	M-Audio SP-2	
12		YAMAHA FC3A Sustain Pedal	
13		YAMAHA FC4A Sustain Pedal	
14		YAMAHA FC5A Sustain Pedal	
15		YAMAHA FC5 Foot Switch Style Sustain Pedal	
16		VFP1 Sustain Pedal	
17		Other Sustain Pedals	
18	Dual Switch Pedal	Lead Foot FS-2	It is a self-locking switch. Both switches need to be disconnected and then connected to the MIDI Pedal Converter.
19		MOSKY DUAL SWITCH	
20		Fishman Dual Foot Switch	
21		Common TRS double switch pedal	
22		BOSS DUAL FOOT SWITCH FS-7	Need to press the FS-7 pedal and then connect it to the EXP port of the product. Please do not power the FS-7.
23	Hi-Hat Pedal	Roland FD-1	
24		Roland FD-8	
25		Roland FD-9	
26		NUX Hi-Hat Kick Pedal	
27		YAMHAH HH65	Will be recognized as an expression pedal.
		...	

Incompatible Models

No.	Pedal Type	Models	Reason
1	Expression Pedal	F10H Kawai sustain pedal	This pedal needs power, not an analog pedal
2	Effects Pedals	SONICAKE VolWah	This pedal needs power, not an analog pedal
3	Effects Pedals	Zakk Wylde Dunlop Cry Baby	This pedal needs power, not an analog pedal

Note1: The above are only some known pedal models/Name.

Note2: MPC-10/20 supports a 6.35mm plug, which can be connected to a positive expression pedal, a reverse polarity expression pedal, a sustain pedal, a dual-switch pedal, and an electronic drum hi-hat.

Note3: If your pedal is an effect pedal that requires power, it is not suitable for this product.