

MIDI To CV Box (MCV-10) Upgrade Instructions

About

Through this document, users can upgrade the MCV-10 box by themselves. When DOREMiDi has new firmware, it will be announced on the official website. Follow the official latest news:

<https://www.doremidi.cn/h-pd-72.html>

Upgrade system requirements: Windows 7 or newer version of Windows system or Mac OS.

Windows: [DOREMiDi Upgrade tool for Windows.zip](#)

MacOS: [DOREMiDi Upgrade tool for MacOS.dmg](#)


(Note: If the link cannot be downloaded, please go to the official website to download the software. www.doremidi.cn)

Step 1: Enter the upgrade mode

- Press and hold the button.
- Then, connect the USB-C to the computer, and then release the button, The indicator light will flash, indicating that it has entered the firmware upgrade mode.




Step 2: Open "DOREMiDi Upgrade Tool", select USB, select the COM port to MCV-10, and click "Connect".

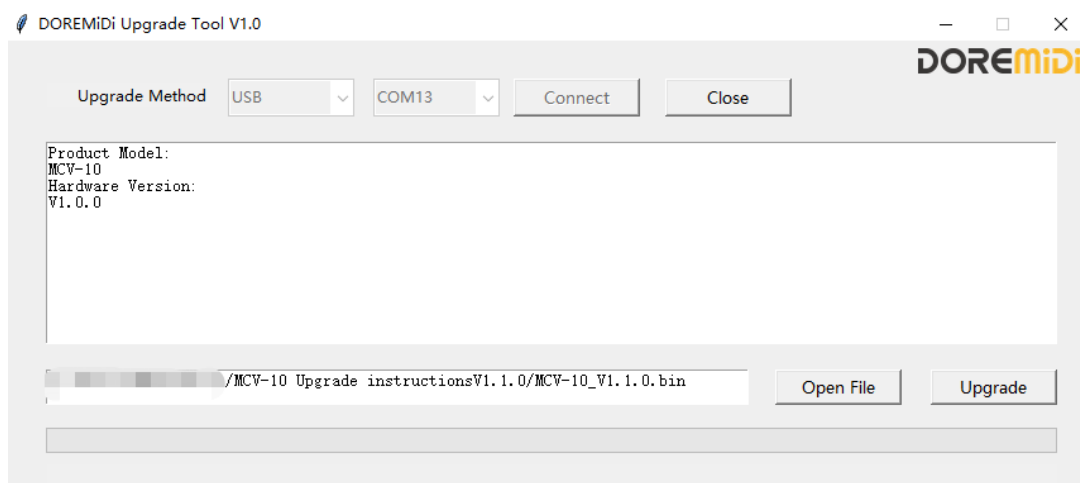

Step 3: Click "Open File", select the upgraded firmware MCV-10_Vxxx, click "Upgrade", and wait for the upgrade to be completed "Upgrade completed!".

Note: After "Upgrade Completed!" is displayed, wait for 5 seconds until the indicator light turns on steadily, and then re-power the product.

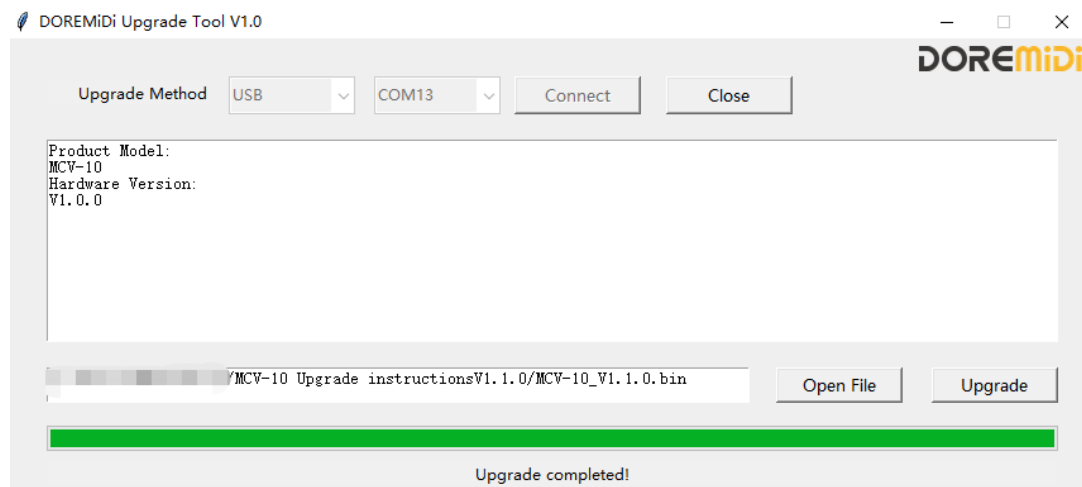

Q&A

Q: How to determine the COM interface?

A: After selecting the COM interface, please try to click "Connect". If it is not a DOREMiDi device, "time out" will be displayed.

Q: After MCV-10 enters the upgrade mode, the computer USB cannot recognize the device.

A: This may be because the computer lacks a driver, please try to install the " Virtual COM Port Driver ". Link: <https://www.doremidi.cn/h-pd-36.html?fromColId=104>